

ZEBRA TLP 2844 – TAG PRINTER SETUP

QUICK INSTALLATION

This document includes quick install directions for using the **Zebra TLP 2844** tag printer. For more help, please see our **Install and Troubleshooting Guide** located in the **Hardware Documents** section of our **Edge User Community** site (www.edgeuser.com).

INSTALLING THE SOFTWARE

There is **no need** to install the Zebra software included on the CD at this time (see USB section). Doing so may create conflict in using the printer with The Edge.

INSTALLING THE HARDWARE

The tag printer can be connected using either a **parallel cable** or a **USB cable**. There is no functionality difference between the two.

INSTALLING WITH PARALLEL CABLE

1. Connect the tag printer to your computer with the **parallel cable**.
2. Open The Edge and click on **Administrative => Configuration**.
3. Find the **Tag Printer 1 settings** section and click the **Tag Printer** option. Then click browse (button with three dots).
4. Select **LPT1** and click **OK**.
5. Set **Tag Printer Type** to **Zebra**. Click **OK** to save this change. Then click **OK** to exit the **Configuration** window.
6. **Restart The Edge**.

INSTALLING WITH USB CABLE

1. Insert the included **Zebra Install CD** but **do not** run any of the software on it.
2. Connect the tag printer to your computer with the **USB cable**.
3. Once connected, the **Found New Hardware Wizard** will appear. Choose the **“Yes, this time only”** option and click **Next**.
4. The Hardware Wizard will now search your computer (and CD-ROM) for the tag printer driver. It may prompt you to select a printer, if so, select **Zebra TLP 2844** and continue hitting **Next** until it is finished.
5. Open The Edge and click on **Administrative => Configuration**.
6. Find the **Tag Printer 1 settings** section and click the **Tag Printer** option. Then click browse (button with three dots).
7. Select **USB printing support...** and click **OK**.
8. Set **Tag Printer Type** to **Zebra**. Click **OK** to save this change. Then click **OK** to exit the **Configuration** window.
9. **Restart The Edge**.

NOTES

- This printer utilizes a black line sensor to determine tag position. It will only feed properly with black line sensor compatible tags; these tags come with preprinted black lines on the back between each tag.
- Set the configuration settings per the table below. Only those options listed here matter; the other adjustment numbers do not affect this printer.

EDGE Configuration Settings

TagAdjustGap	0
TagAdjustLeft	5
TagAdjustTop	27